



Voldikkardina EV2 paigaldusjuhend

AKNAKATE
www.aknakate.ee



Tarvikud komplektis • supplied in the set




Vajalikud tööriistad • necessary tools

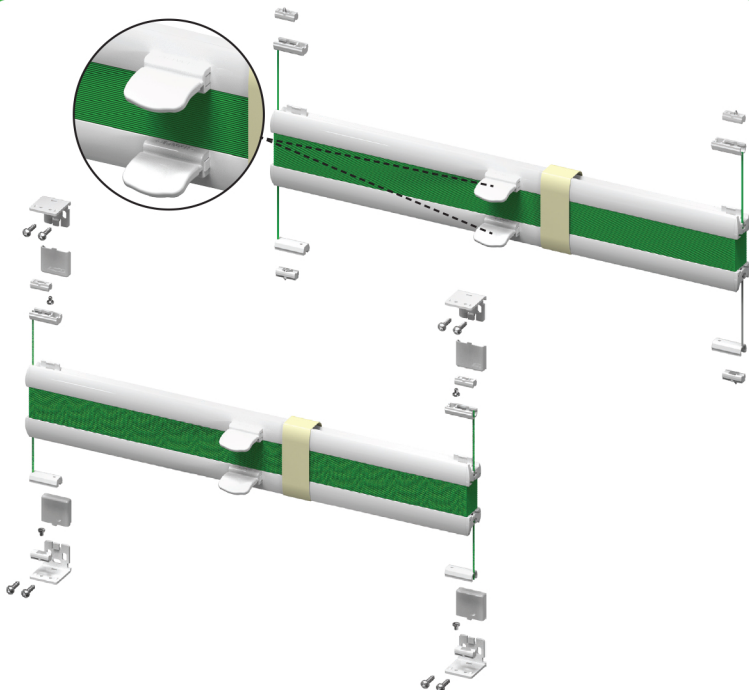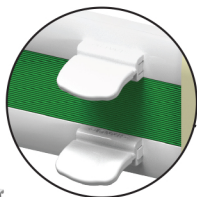


Tähelepanu!
Attention!
Impotant!
Belangrijk!
Uwaga
Wichtig!

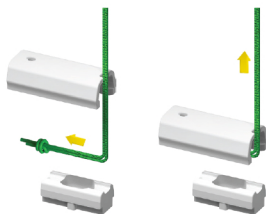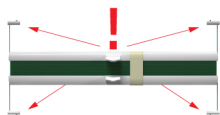

ø 2,2 mm






ø 2,0 mm




ø 1,5 mm

mounting / montage / montaggio / montaż

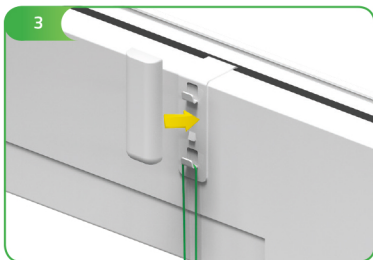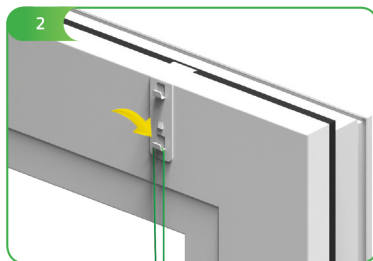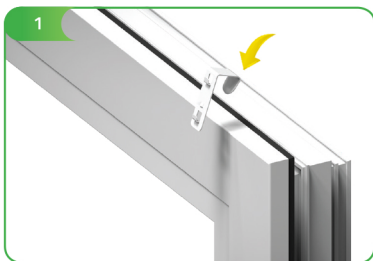

1a

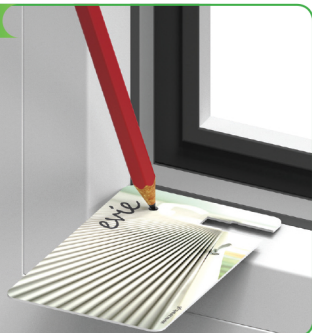

1b



2a



2b




3a



3b




4a



4b




5a



5b




6

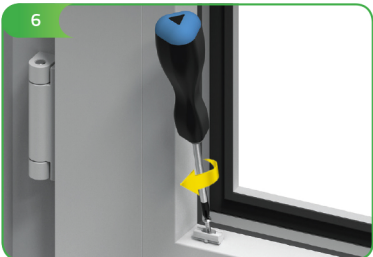


7




8

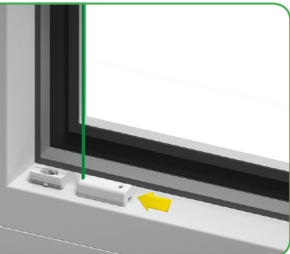


9

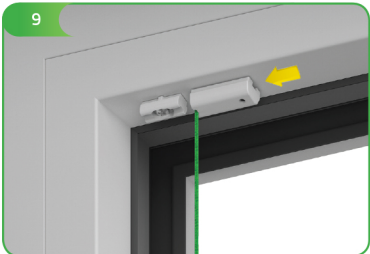

10

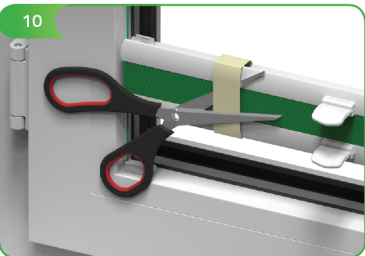


1

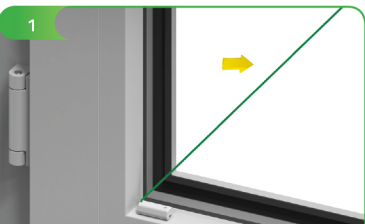


Lahtivõtmine / disassembly

2

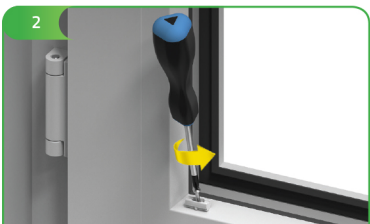


Lahtivõtmine / disassembly


1a

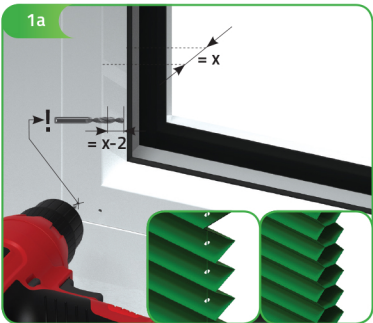


1b

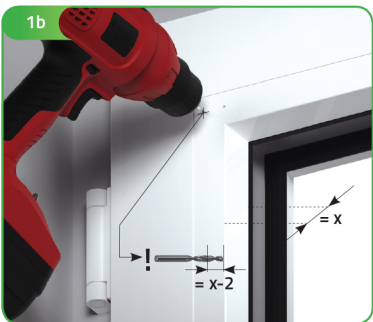


2

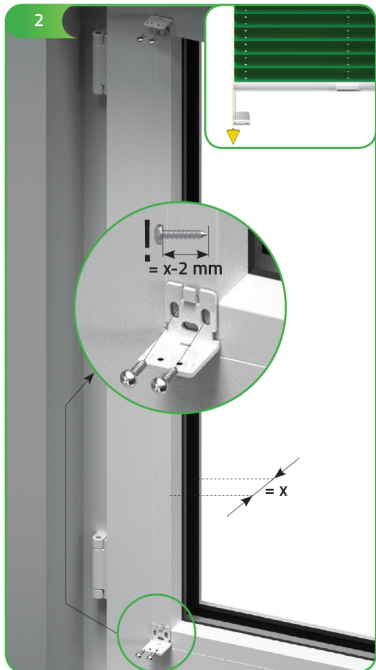

3

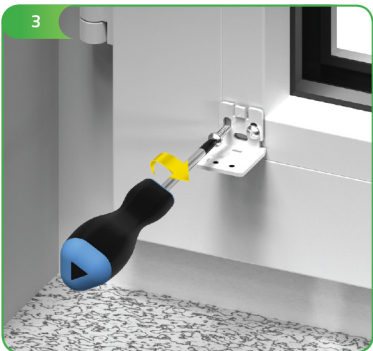

4

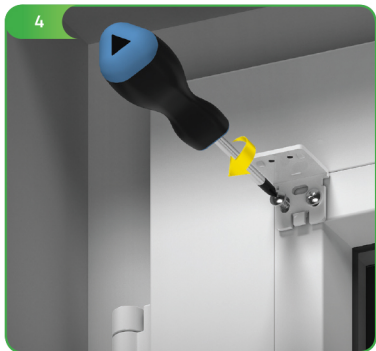

5




6




7




8

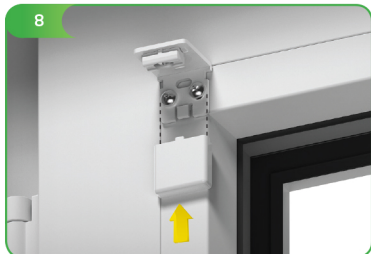


9

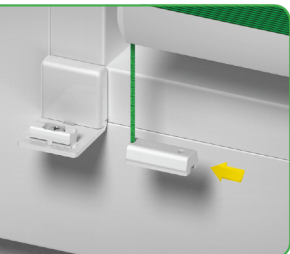


10

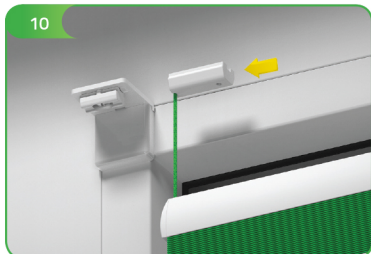

11

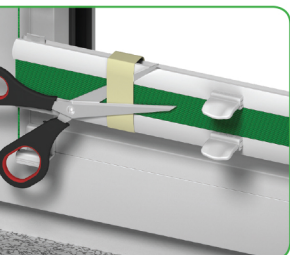

1

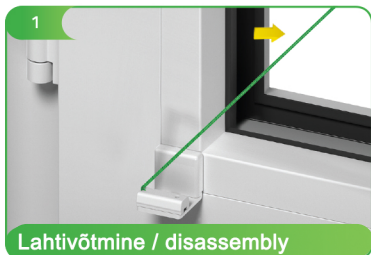

Lahtivõtmine / disassembly